


ASSEMBLY INSTRUCTIONS

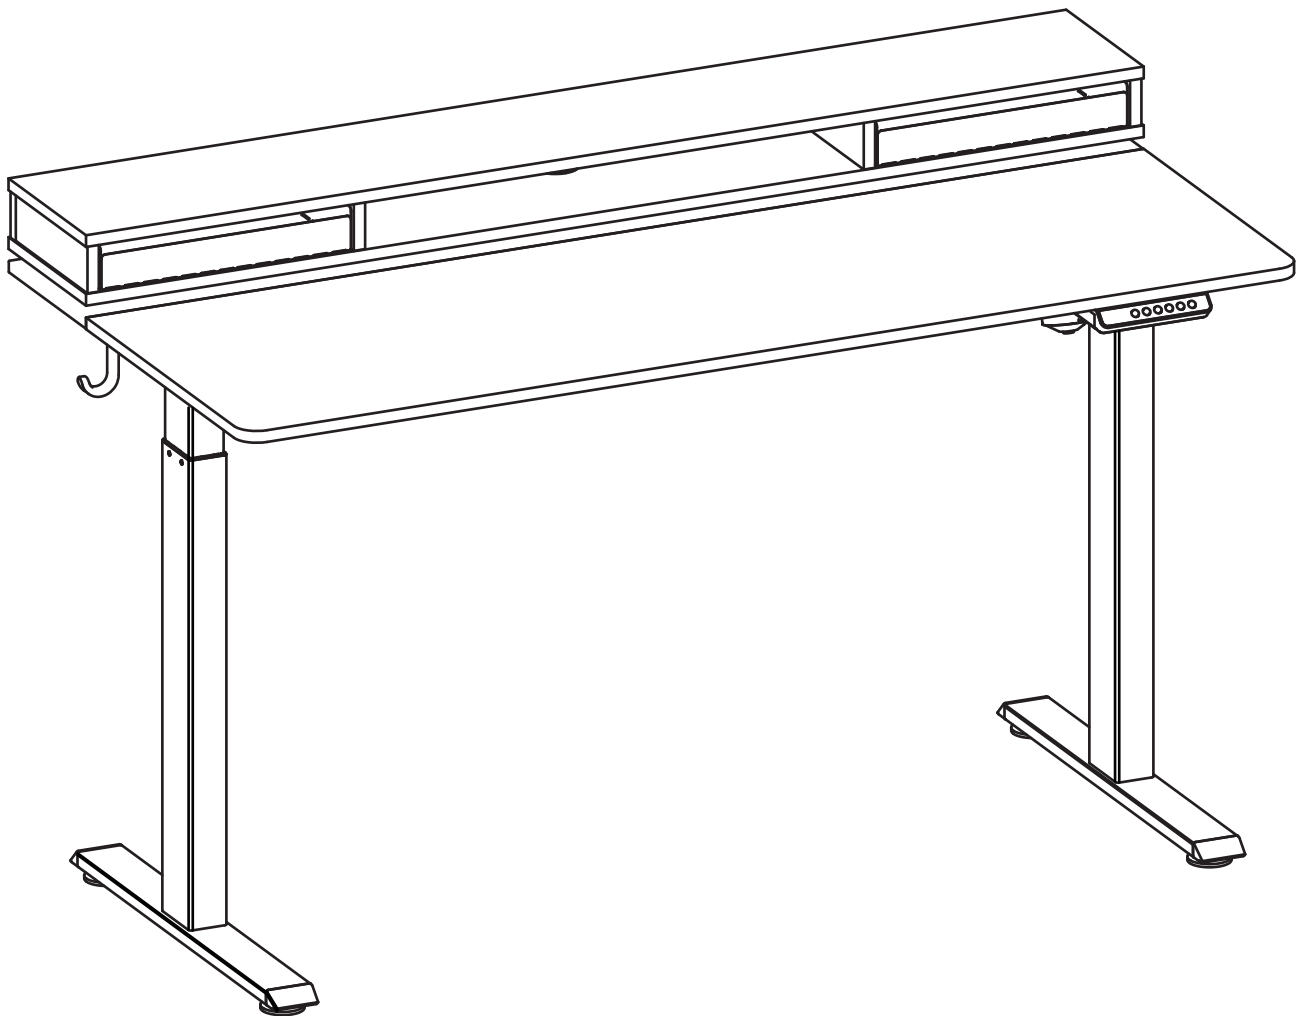

English

Caution

- Keep children and animals away from the desk during use. Ensure the desktop is not touching any walls.
- Remove obstacles taller than 20"/51 cm from underneath the desk.
- Operate only in a working environment temperature of 32°F-104°F/0°C-40°C.
- Keep product away from corrosive gases, liquids and dusty objects.
- Keep hands, feet and other body parts in a safe position during operation. Anti-collision is not automatically enabled during all resets.
- Please read the following instructions carefully before using the height-adjustable desk.
- The company does not bear any warranty or liability for damage and human injury caused by any abnormal or un-intended operation of the equipment.
- It is necessary to perform a manual reset after the initial installation or power cycling the equipment.

Español

Precaución

- Mantenga a los niños y animales alejados del escritorio durante su uso. Asegúrese de que el escritorio no toca ninguna pared.
- Retire aquellos obstáculos con una altura superior a 20"/51 cm de debajo del escritorio.
- Opérela únicamente en una temperatura del entorno de trabajo de 32°F-104°F/0°C-40°C.
- Mantenga el producto alejado de gases corrosivos, líquidos y objetos con polvo.
- Mantenga las manos, pies y otras partes del cuerpo en una posición segura durante el funcionamiento. No se habilita la anticollisión de forma automática tras los reinicios.
- La empresa no ofrece ninguna garantía ni asume ninguna responsabilidad por cualquier daño o lesión humana provocada por un funcionamiento anormal o no previsto del equipo.
- Es necesario realizar un reinicio manual tras la instalación inicial o el ciclo de encendido.

Italiano

Attenzione

- Tenere i bambini e gli animali lontani dalla scrivania durante l'uso. Assicurarsi che il piano non tocchi alcuna parete.
- Rimuovere gli ostacoli più alti di 20"/51 cm da sotto la scrivania.
- Operare solo in un ambiente di lavoro con una temperatura di 32°F-104°F/0°C-40°C.
- Tenere il prodotto lontano da gas e liquidi corrosivi e oggetti polverosi.
- Tenere mani, piedi e altre parti del corpo in posizione di sicurezza durante il funzionamento. L'anti-collisione non è automaticamente attivata dopo il ripristino.
- La società non si assume alcuna garanzia o responsabilità per danni e lesioni umane causati da un funzionamento anomalo o non previsto dell'apparecchiatura.
- È necessario eseguire un ripristino manuale dopo l'installazione iniziale o il ciclo di alimentazione.

Deutsch

Vorsicht



- Halten Sie Kinder und Tiere während der Benutzung vom Tisch fern. Achten Sie darauf, dass die Tischplatte keine Wände berührt.
- Entfernen Sie Hindernisse, die höher als 20"/51 cm Zoll sind, von der Unterseite des Tisches.
- Betreiben Sie das Gerät nur in einer Arbeitsumgebung mit einer Temperatur von 32°F-104°F/0°C-40°C.
- Halten Sie das Produkt von ätzenden Gasen, Flüssigkeiten und staubigen Gegenständen fern.
- Halten Sie Hände, Füße und andere Körperteile während des Betriebs in einer sicheren Position. Der Antikollisionsschutz wird nach den Zurücksetzen nicht automatisch aktiviert.
- Das Unternehmen übernimmt keine Garantie oder Haftung für Schäden und Verletzungen, die durch einen abnormalen oder unbeabsichtigten Betrieb des Geräts verursacht werden.
- Nach der Erstinstallation oder dem Ersteinsschalten der Stromversorgung muss eine manuelle Rückstellung vorgenommen werden.

Français

 
 
 
 



 








Attention



- Pendant l'utilisation, gardez les enfants et les animaux à l'écart du bureau. Veillez à ce que le bureau ne touche aucun mur.
- Éliminez les obstacles de plus de 20"/51 cm pouces de hauteur sous le bureau.
- N'utilisez le produit que dans un environnement de travail dont la température est comprise entre 32°F-104°F/0°C-40°C.
- Éloignez le produit de toute source de gaz corrosifs, de liquides et d'objets poussiéreux.
- Gardez les mains, les pieds et les autres parties du corps dans une position sûre lorsque vous utilisez l'appareil. L'anticollision n'est pas automatiquement activée après les réinitialisations.
- Aucune garantie ou responsabilité n'est assumée par la société pour les dommages et les blessures humaines causés par un fonctionnement anormal ou non intentionnel de l'équipement.
- Une réinitialisation manuelle est indispensable après l'installation initiale ou un cycle d'alimentation.

日本語

注意

- 本製品を使用している時、子供や動物から遠ざけてください。デスクトップが壁に触れていないことを確認してください。
- 机の底から20インチより高い障害物を取り除いてください。
- 32°F-104°F/0°C-40°Cの作動環境温度のみで動作する。
- 本製品を腐食性ガス、液体、ほこりの多い物体から遠ざけてください。
- 操作中に手、足、その他の体の部分を安全な位置に保ってください。アンチ衝突は、すべてのリセット中に自動的に有効にされていません。
- このデスクを使用する前に、以下の取扱説明書をよくお読みください。
- 機器の異常または非意図的な操作によって引き起こされた損傷と人身傷害に対していかなる保証または責任も負いません。
- 初回装着または機器通電後、手動リセットが必要です。

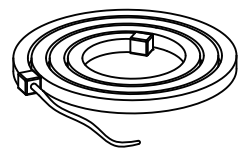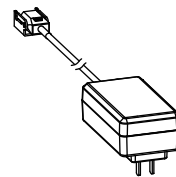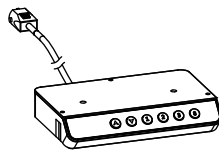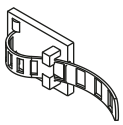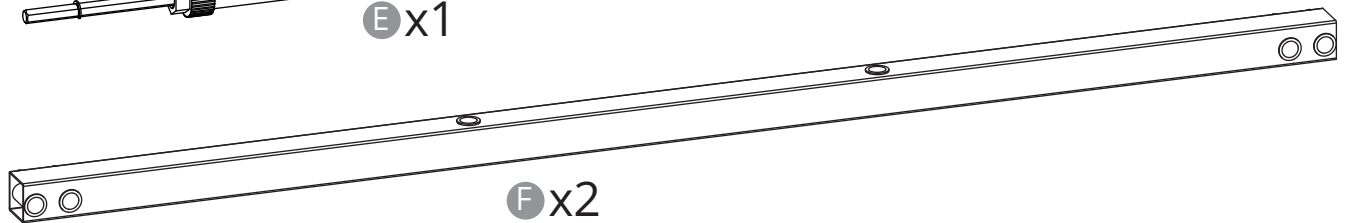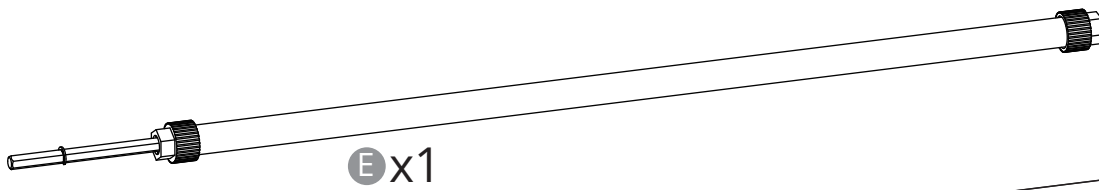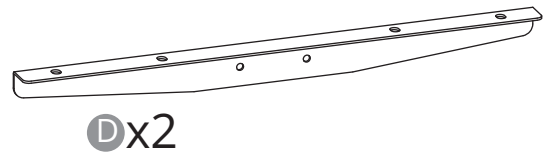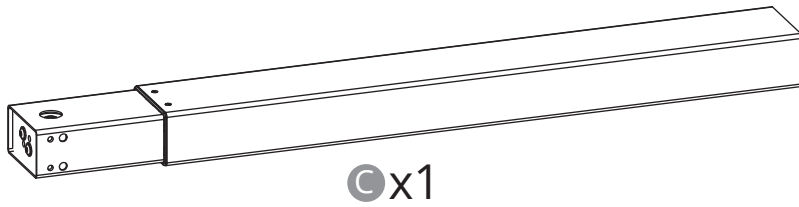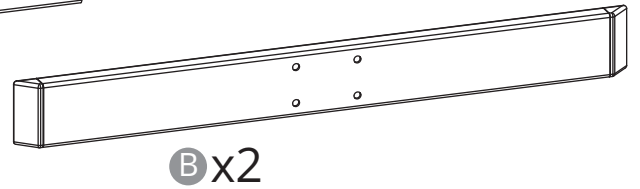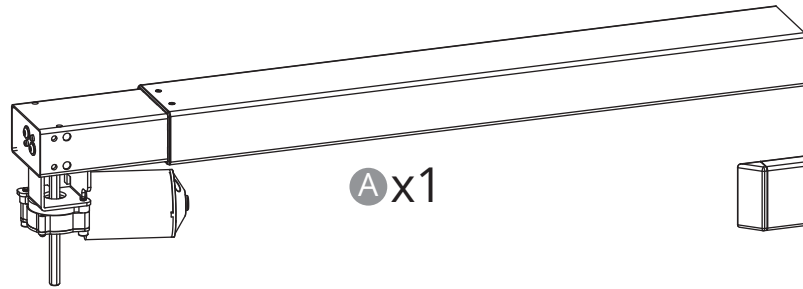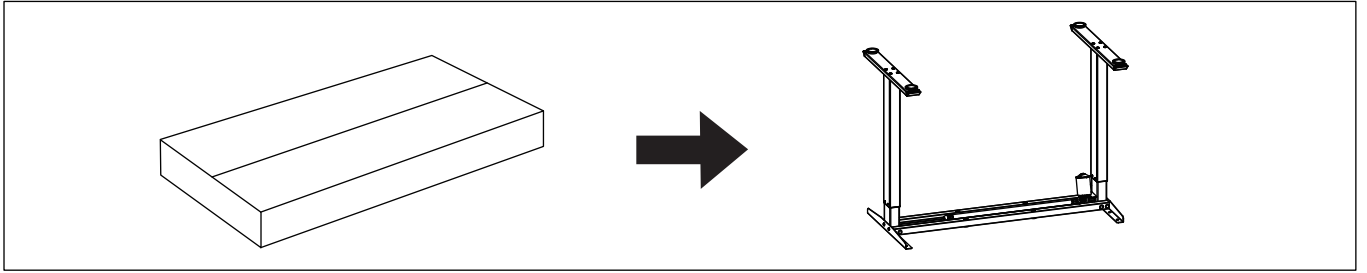

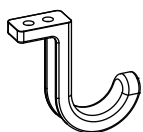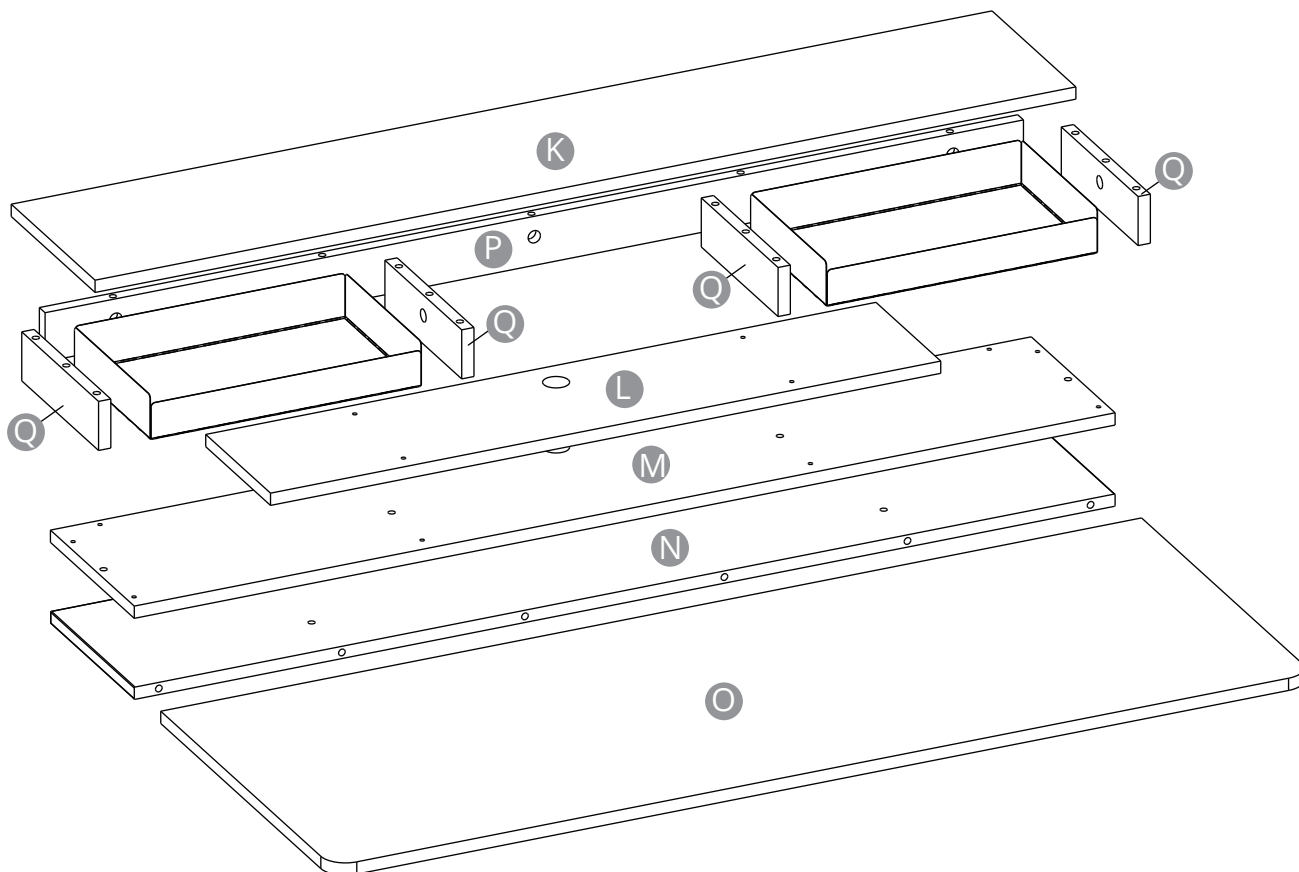


R x2




S x5



 
T x1




U x4

 


V x2

 

1 x4
M6x25

 

2 x11
M4x35

 


3 x4
M4x28



4 x14
M5x16



5 x7

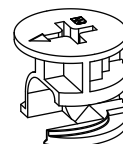


6 x7




7 x22 (48"/50")
120cm/140cm
x23 (60")
152cm



 8 x8
M6x12




9 x4
M6x15

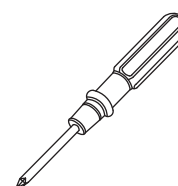


10 x1


1

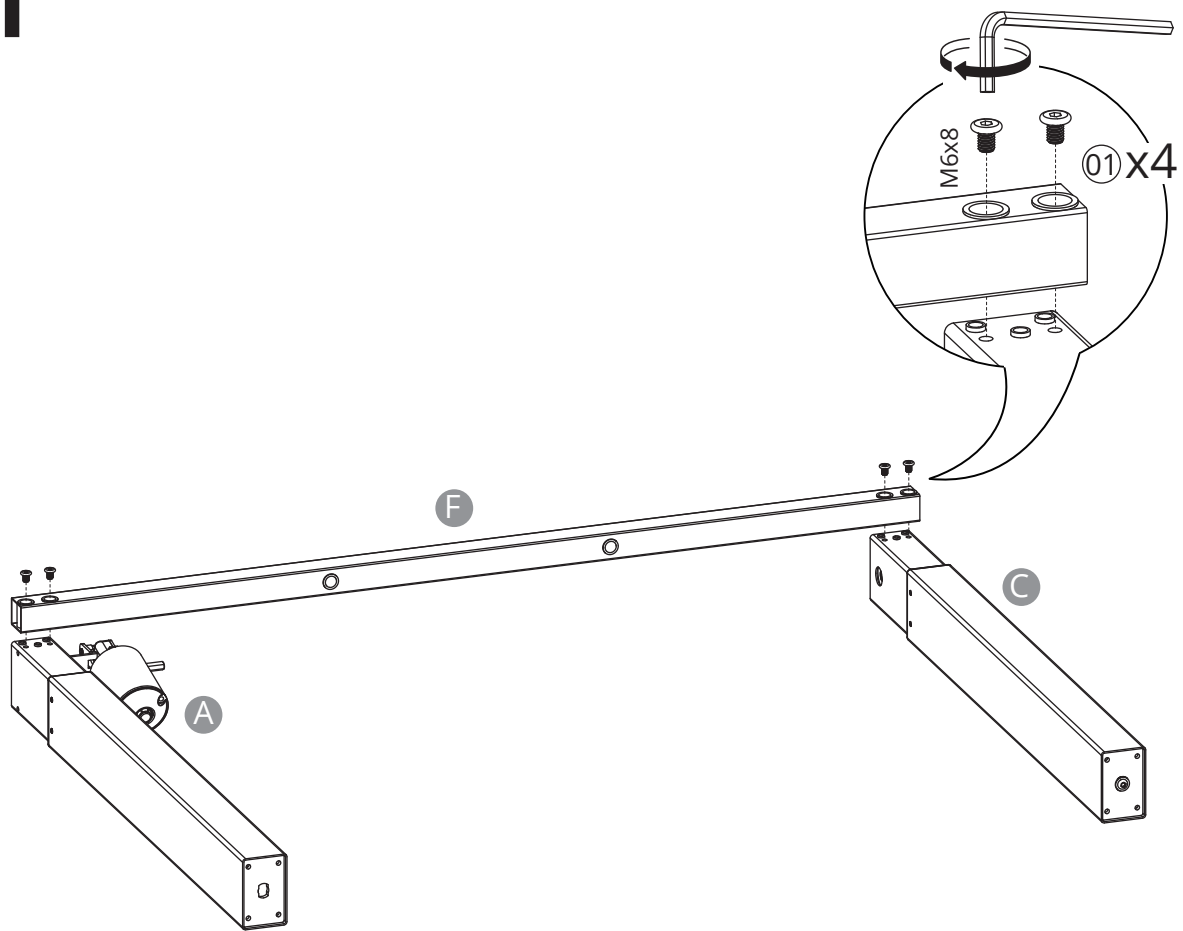


2

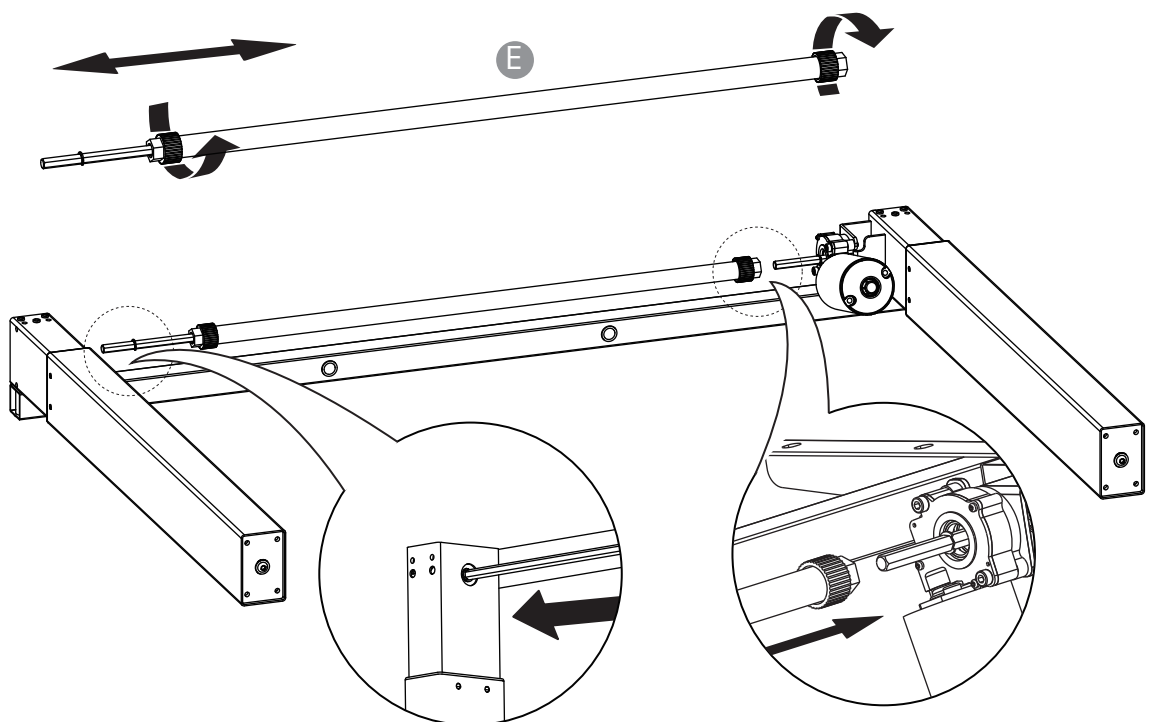


3

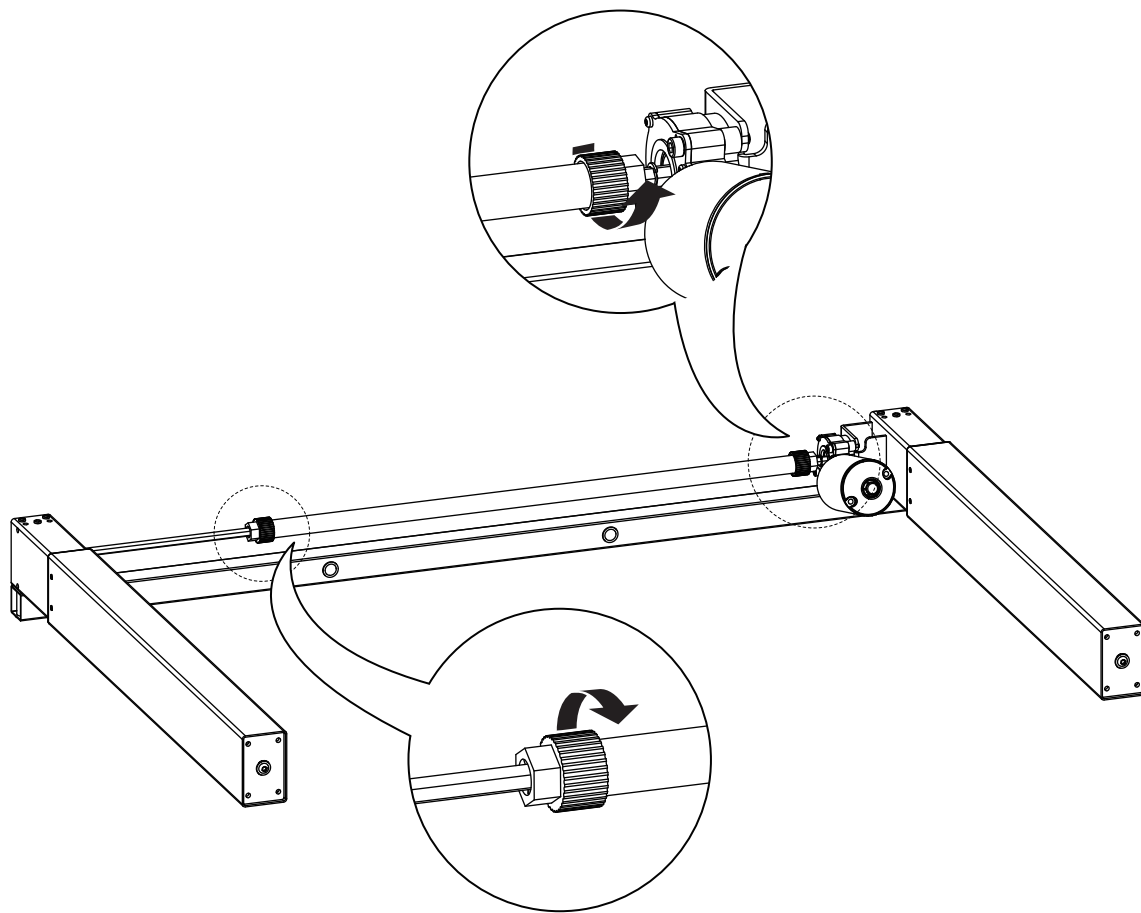


4

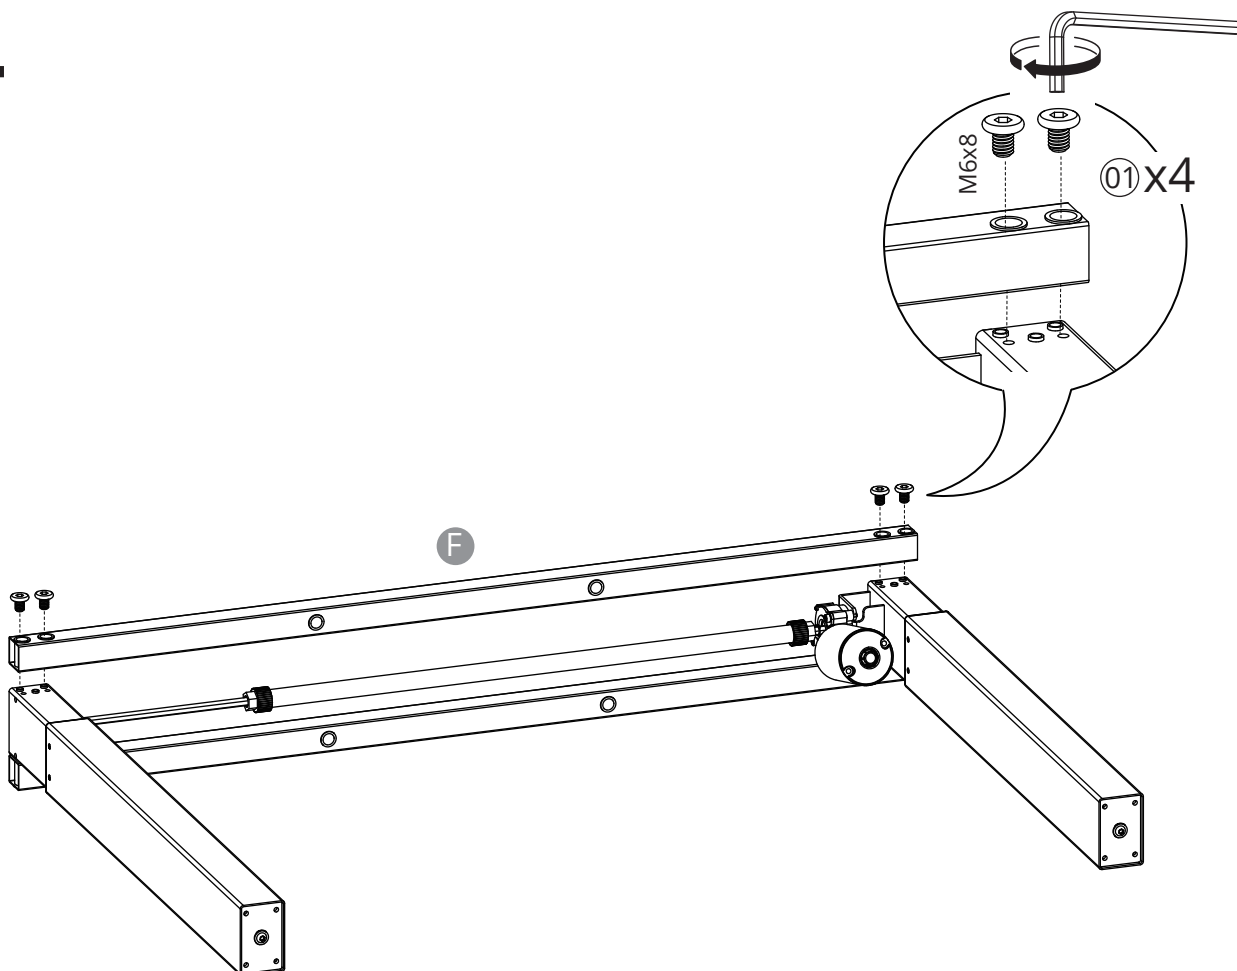


5

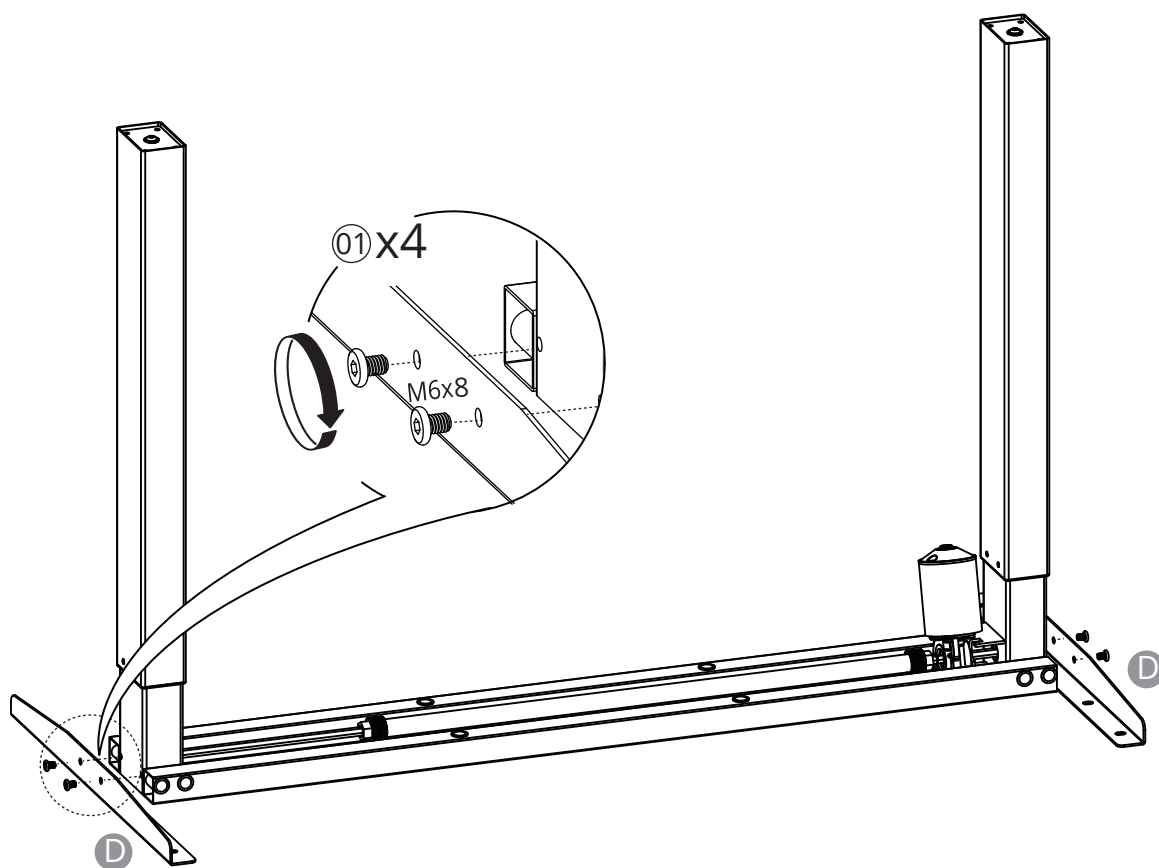

6

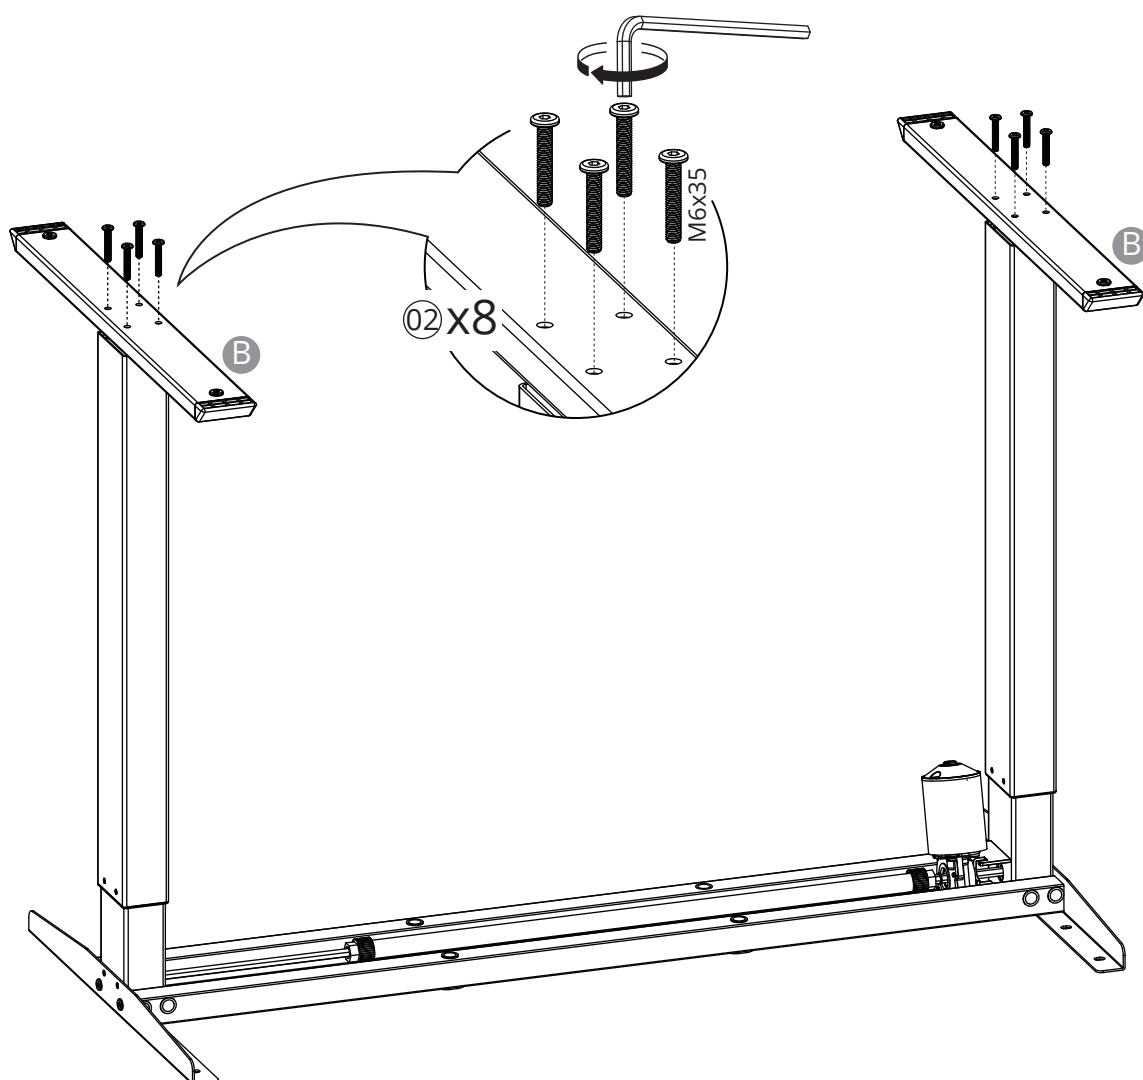


7

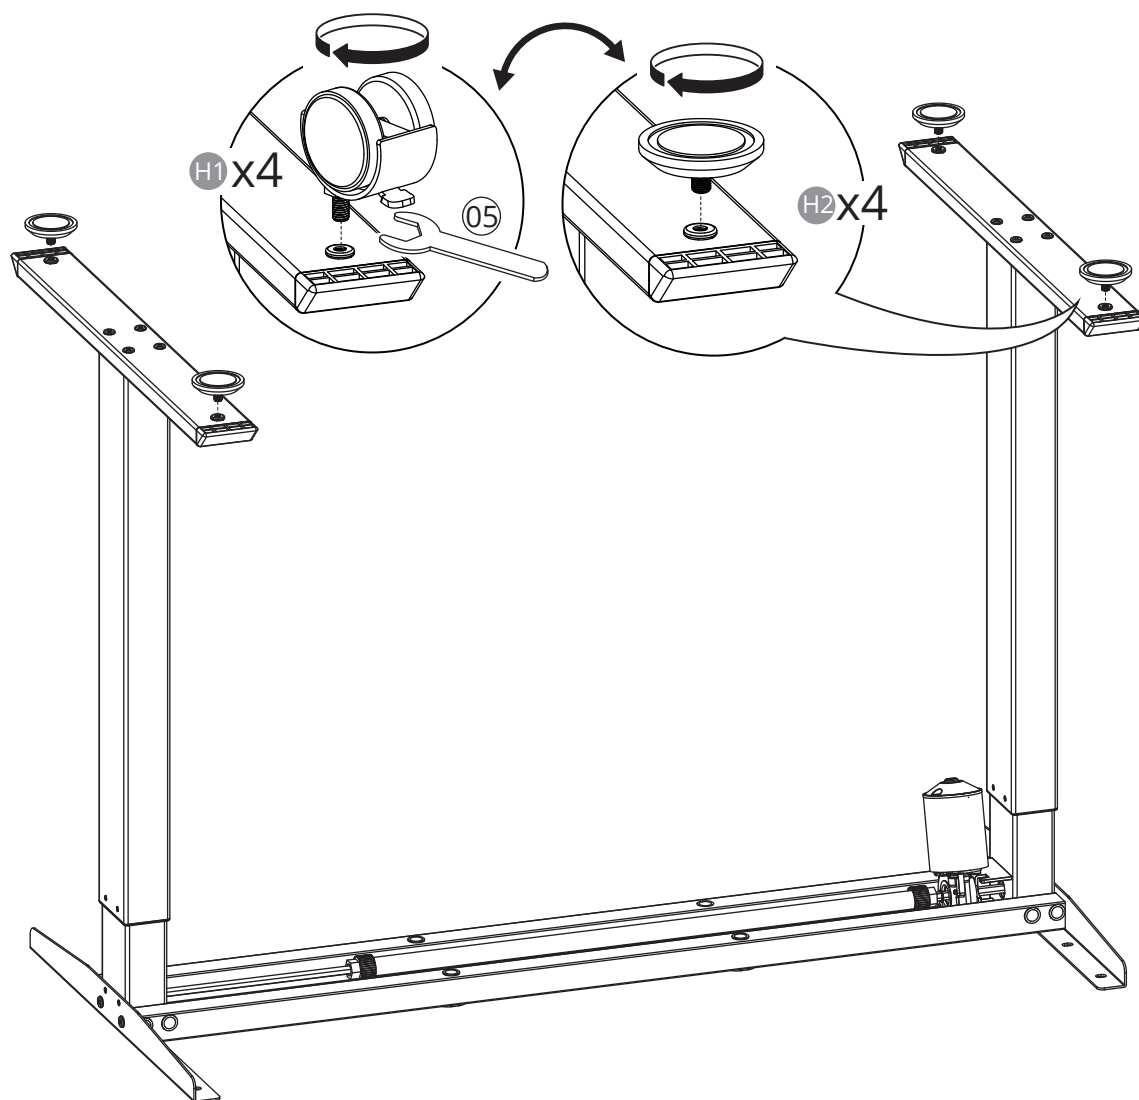


8


48"/55"
(120cm/140cm)

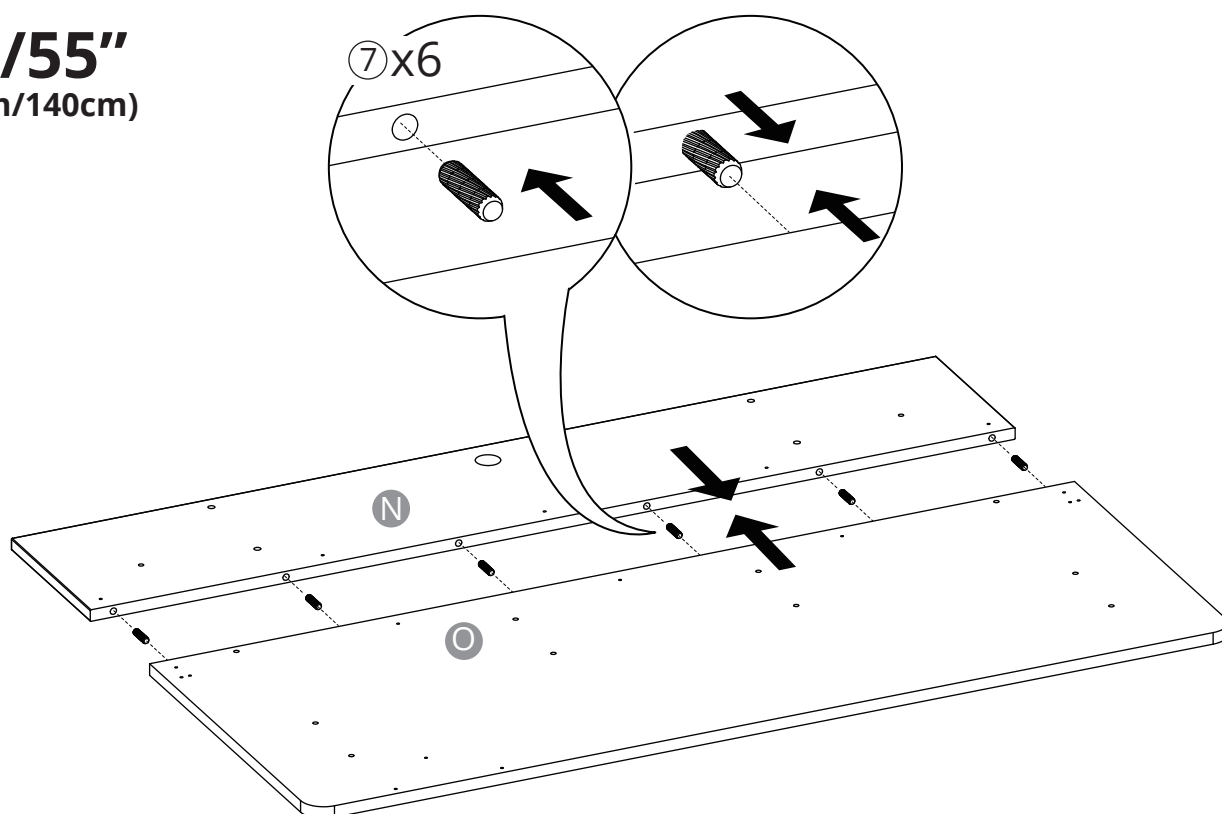


60"
(152cm)

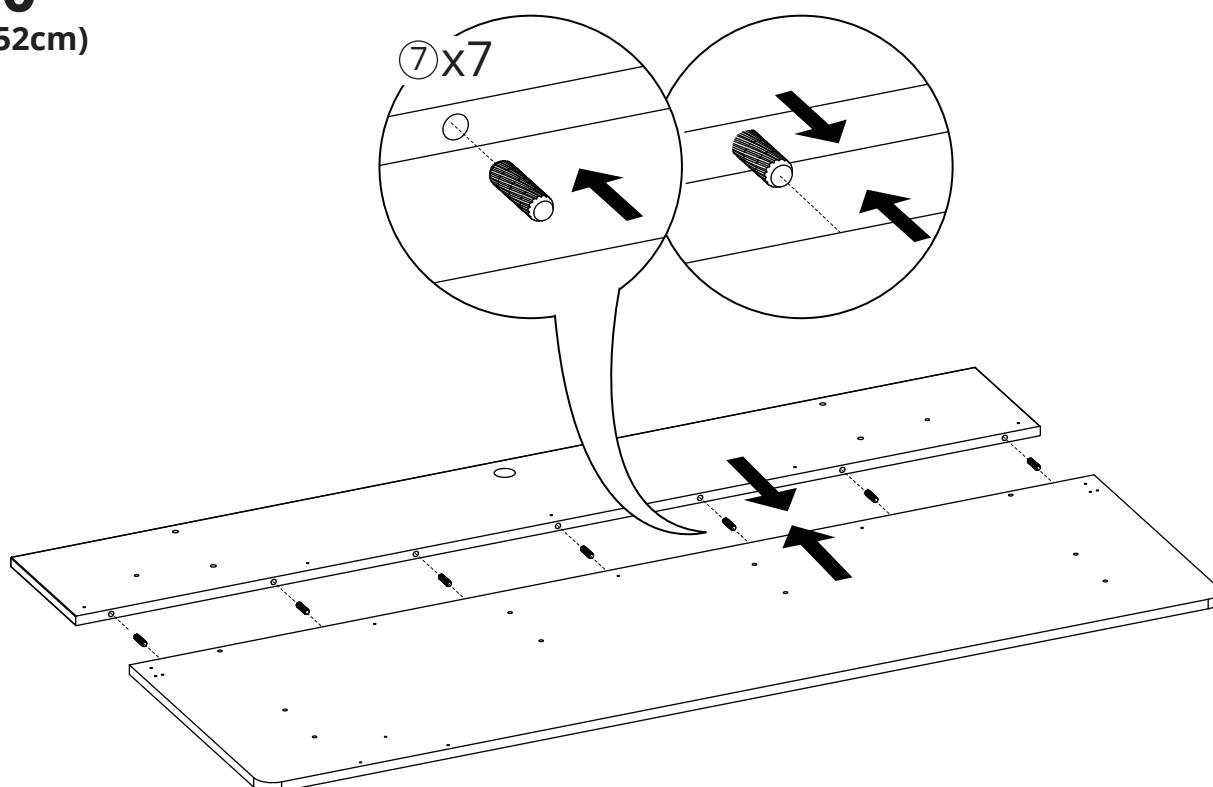



9

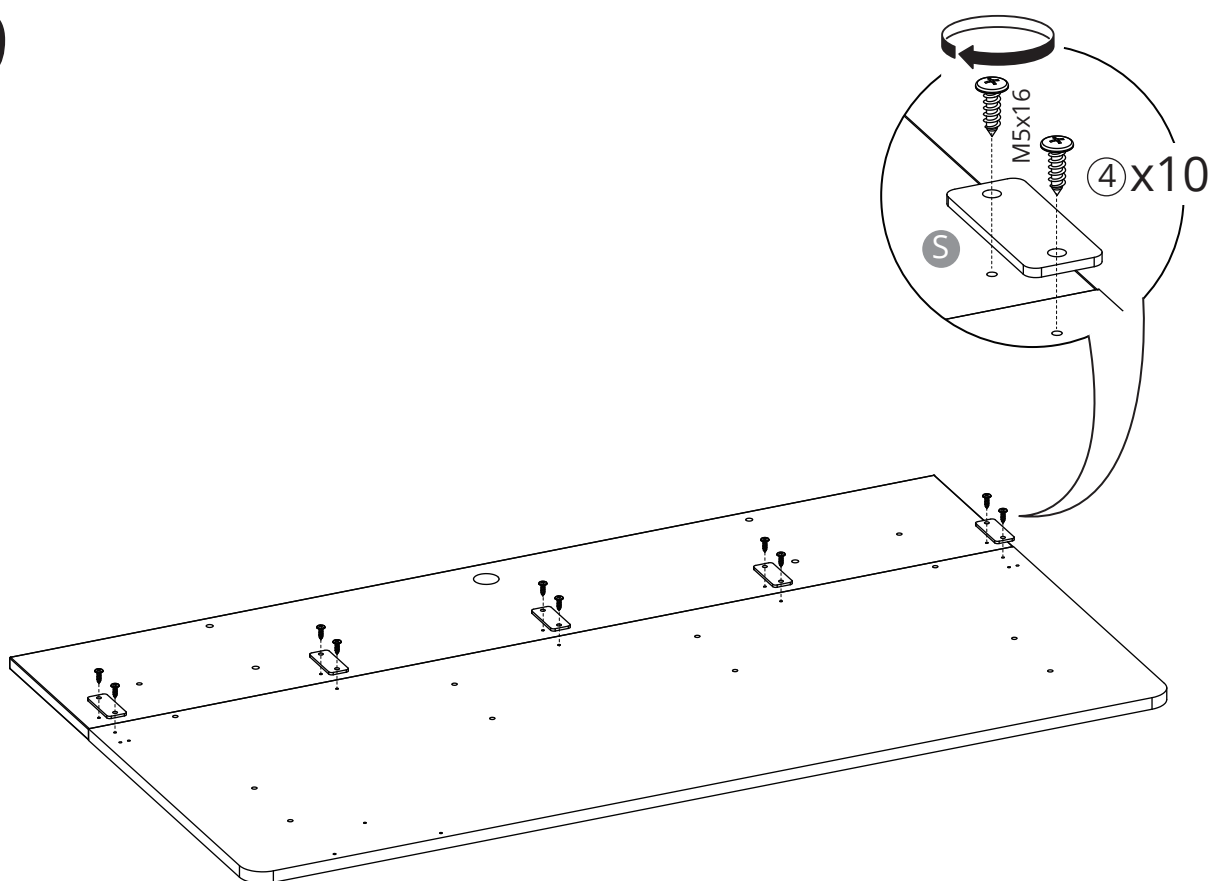


10

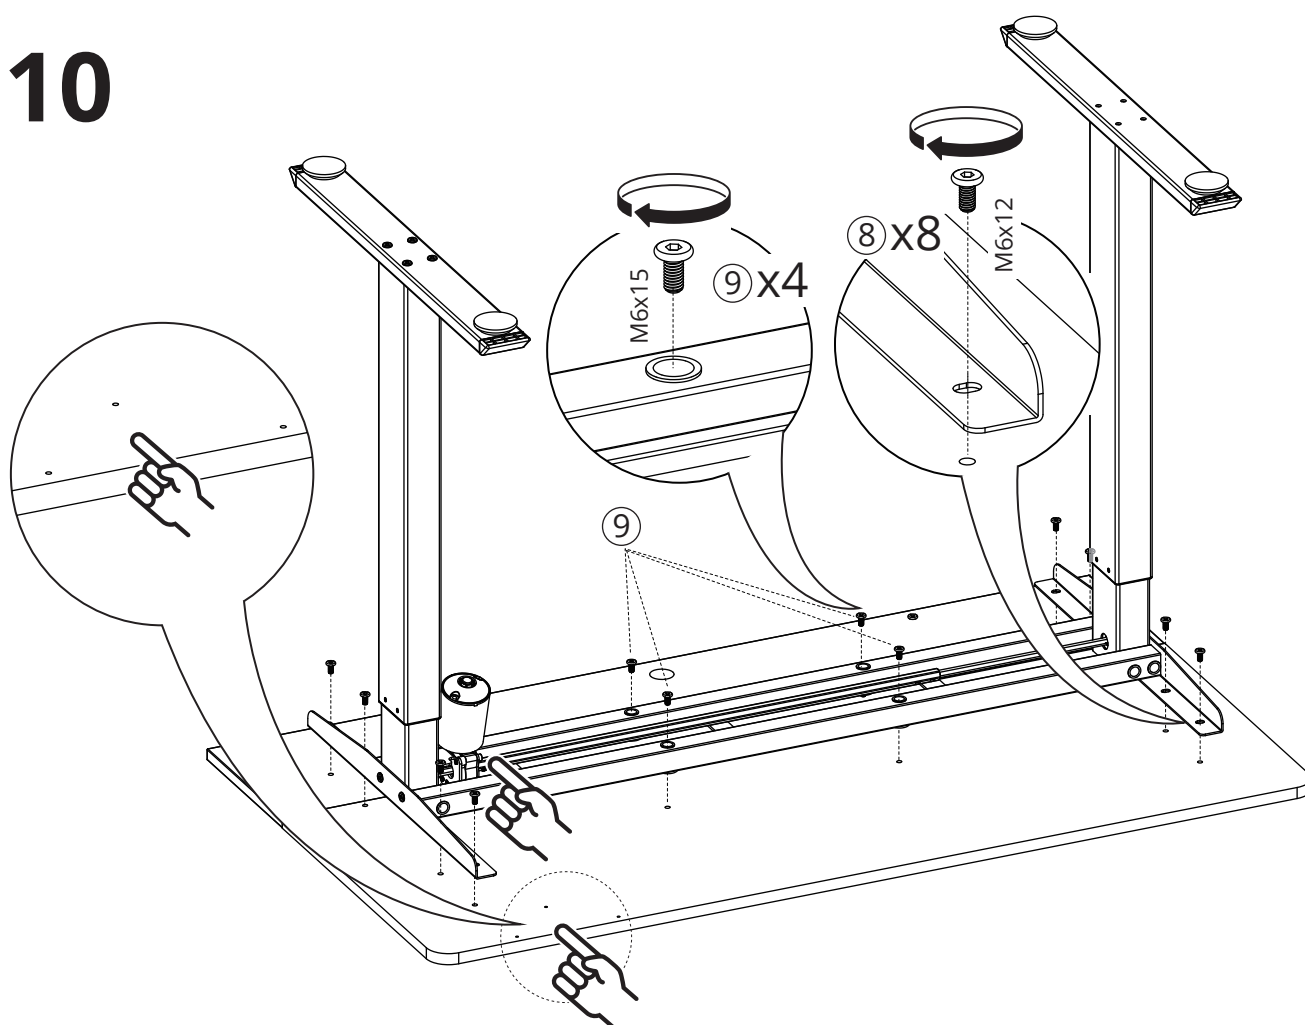

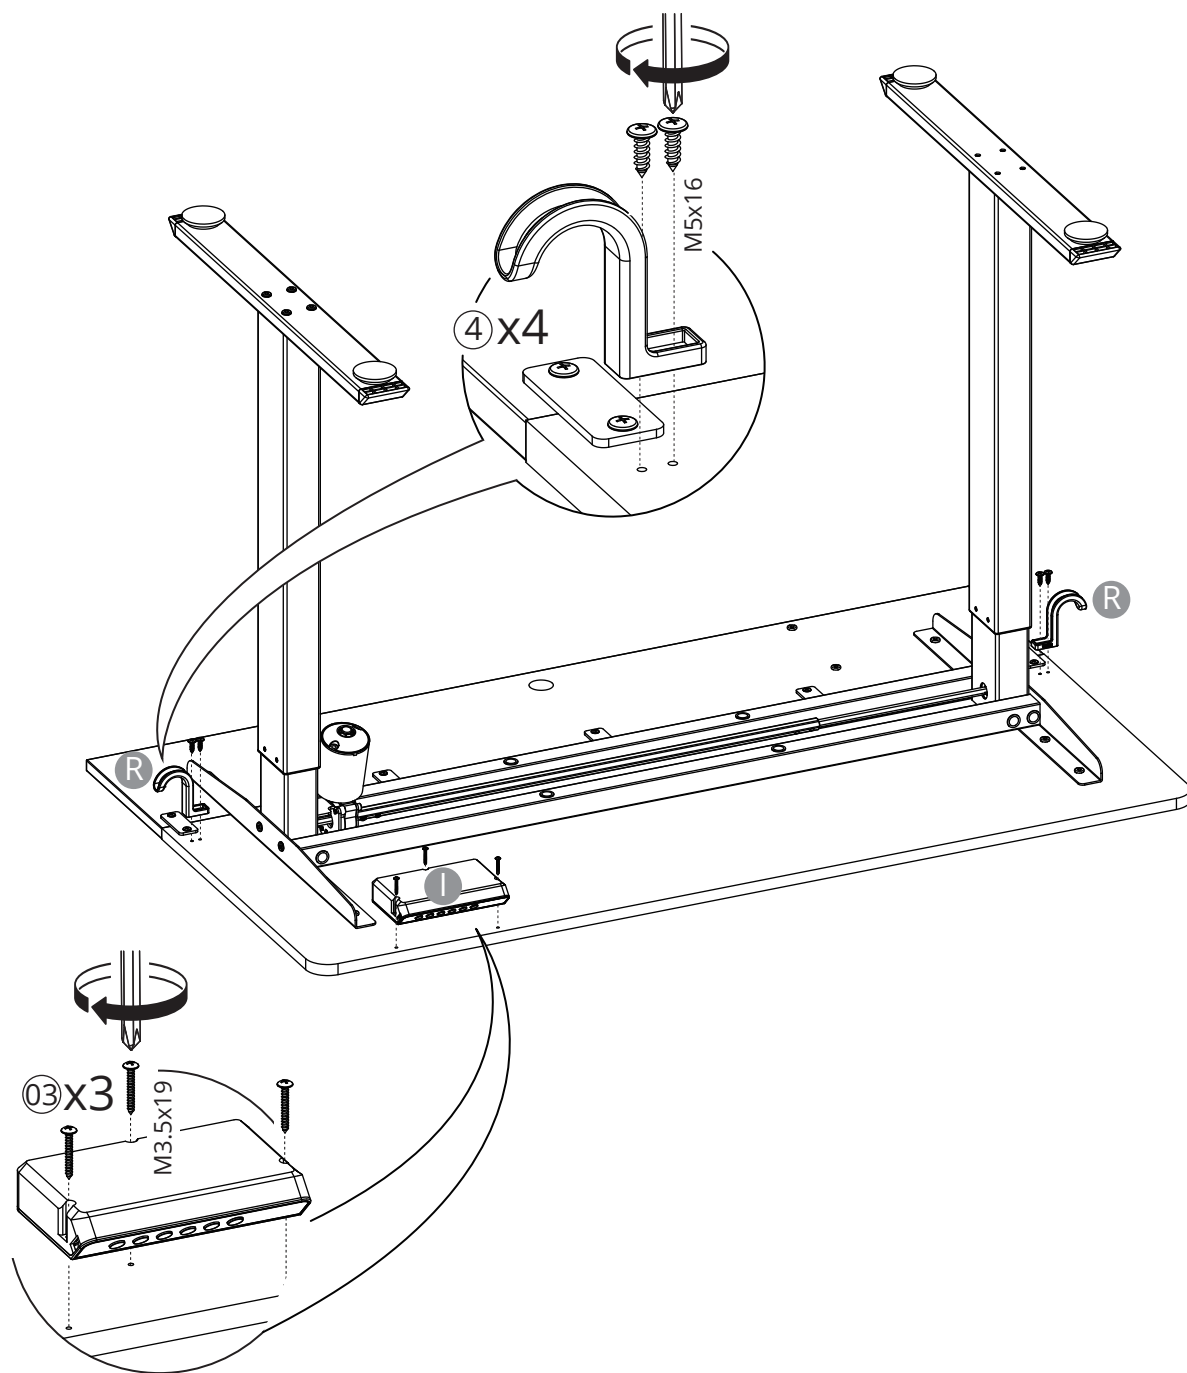


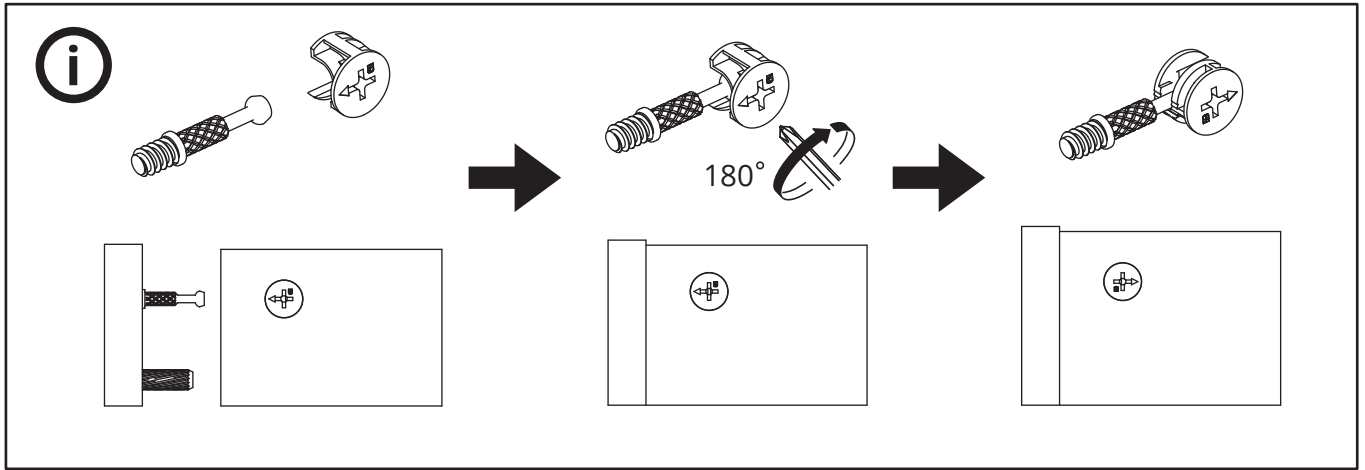


12

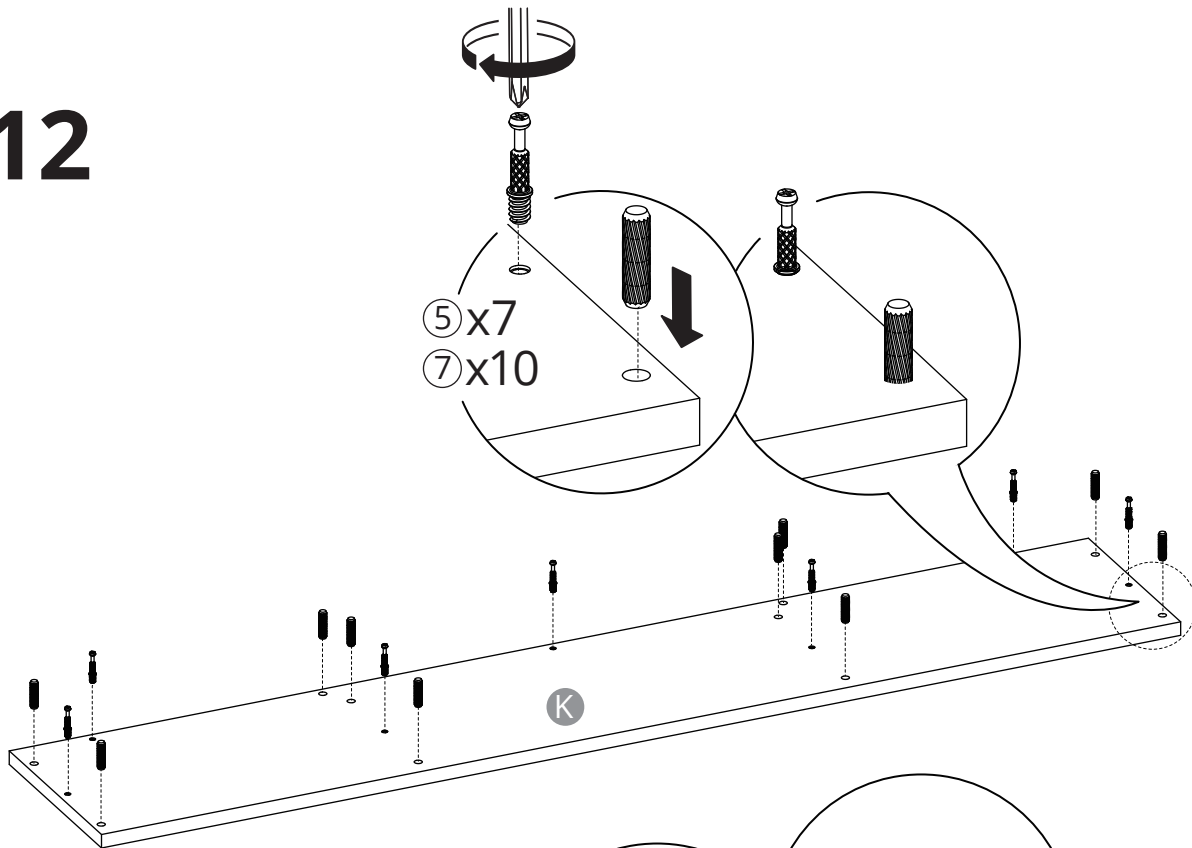


13

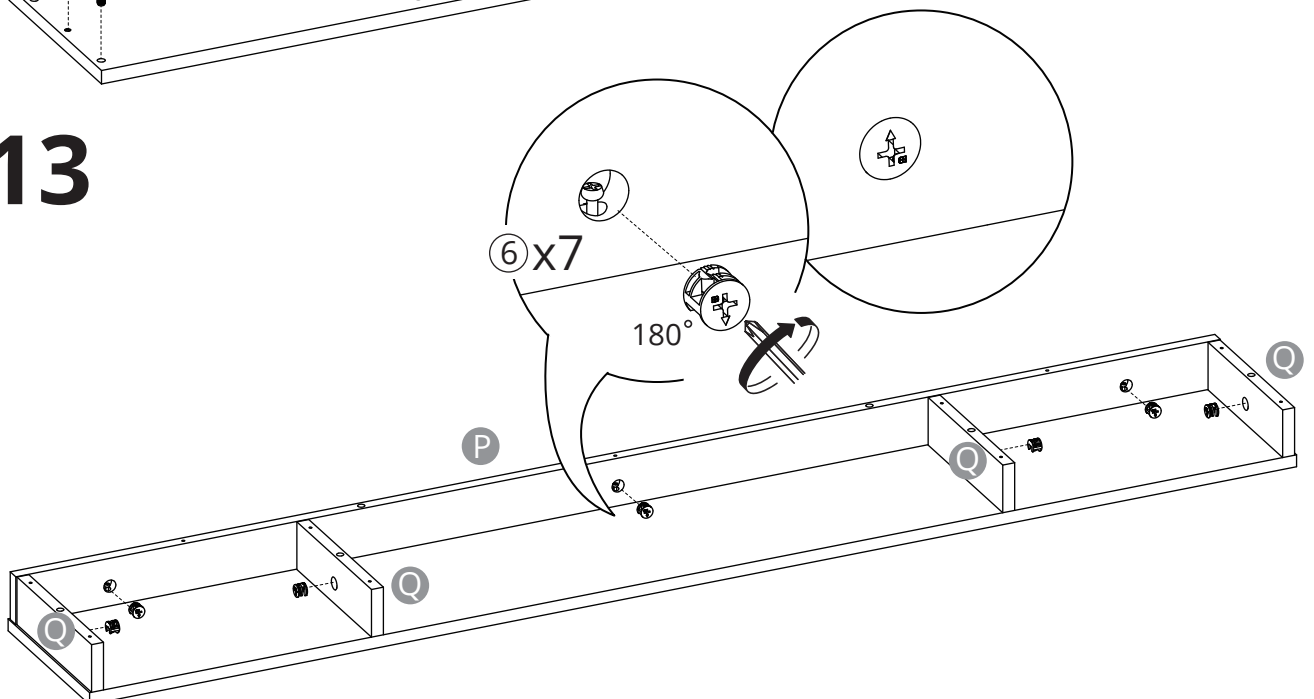


14

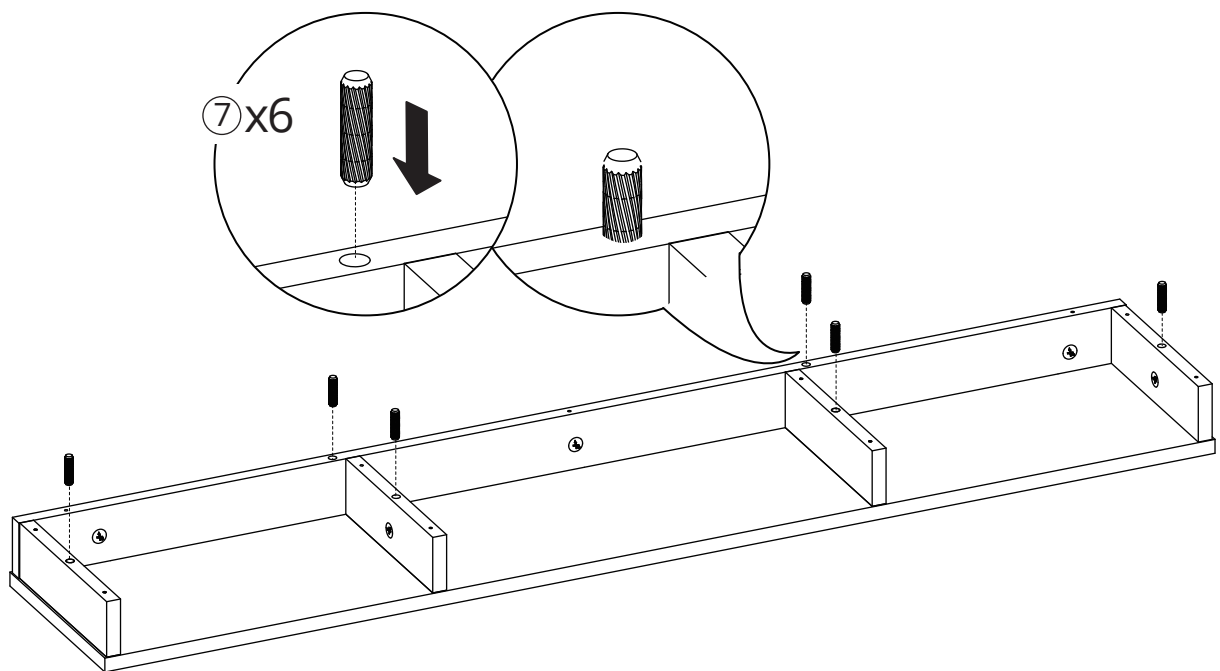


15

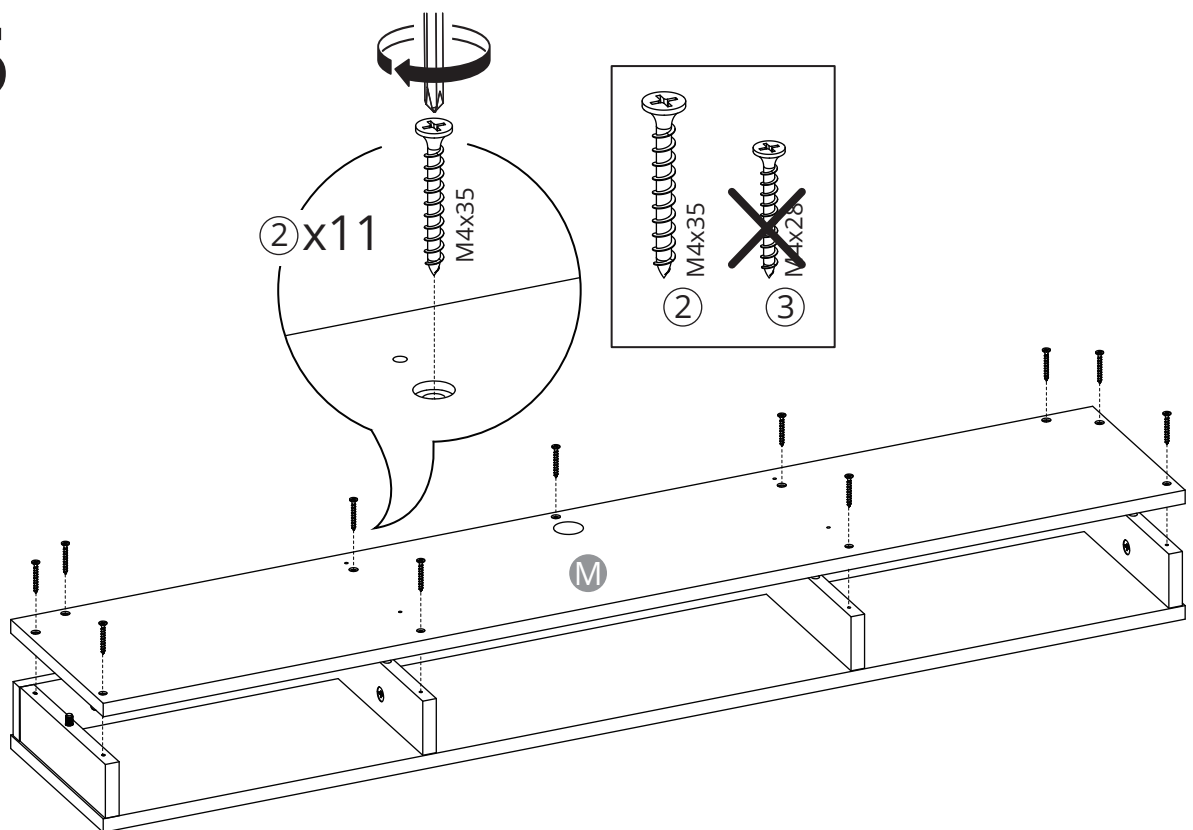


16

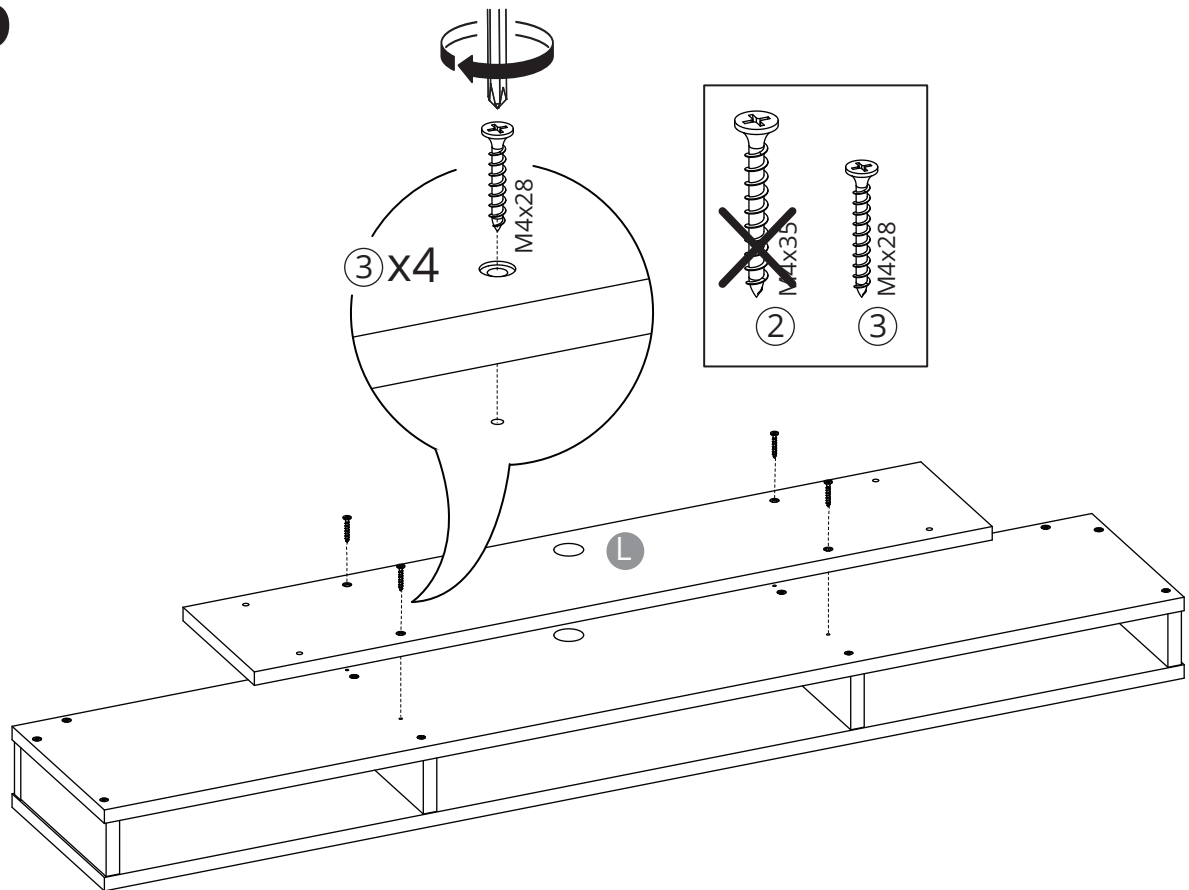


17

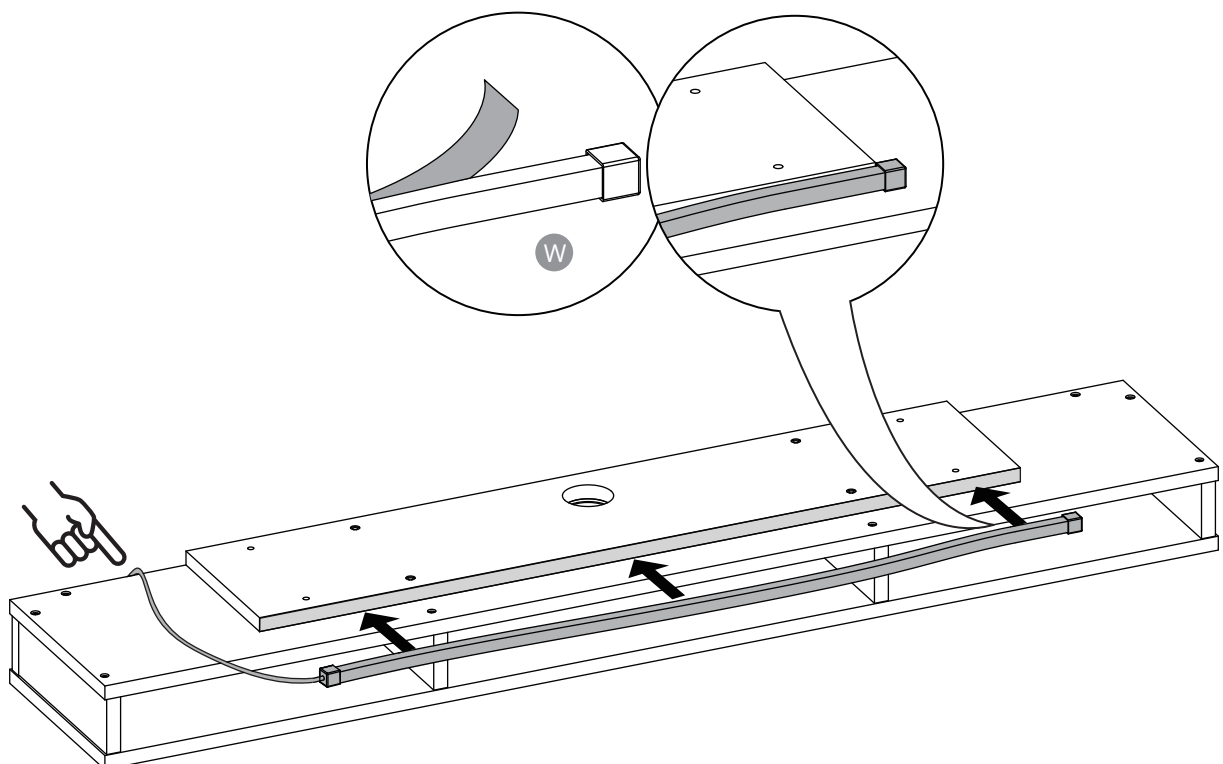


18

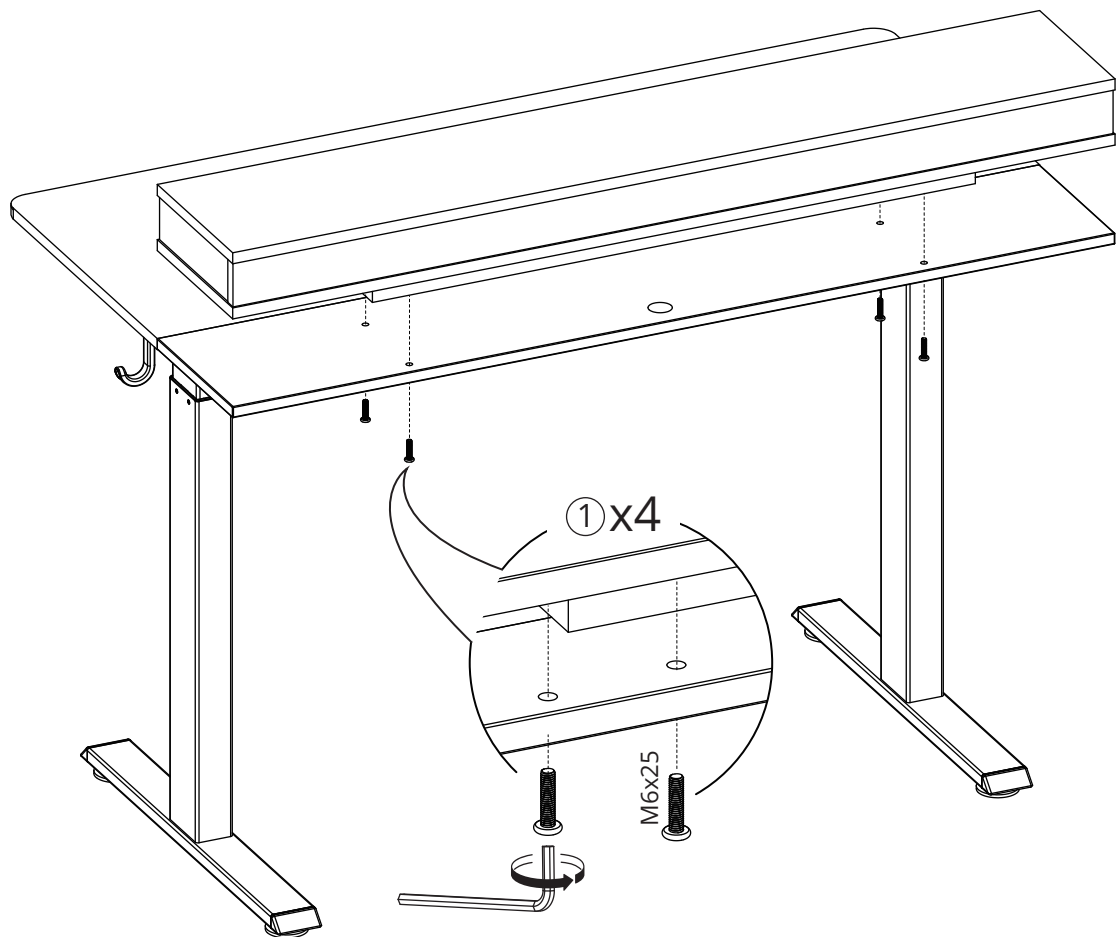


19

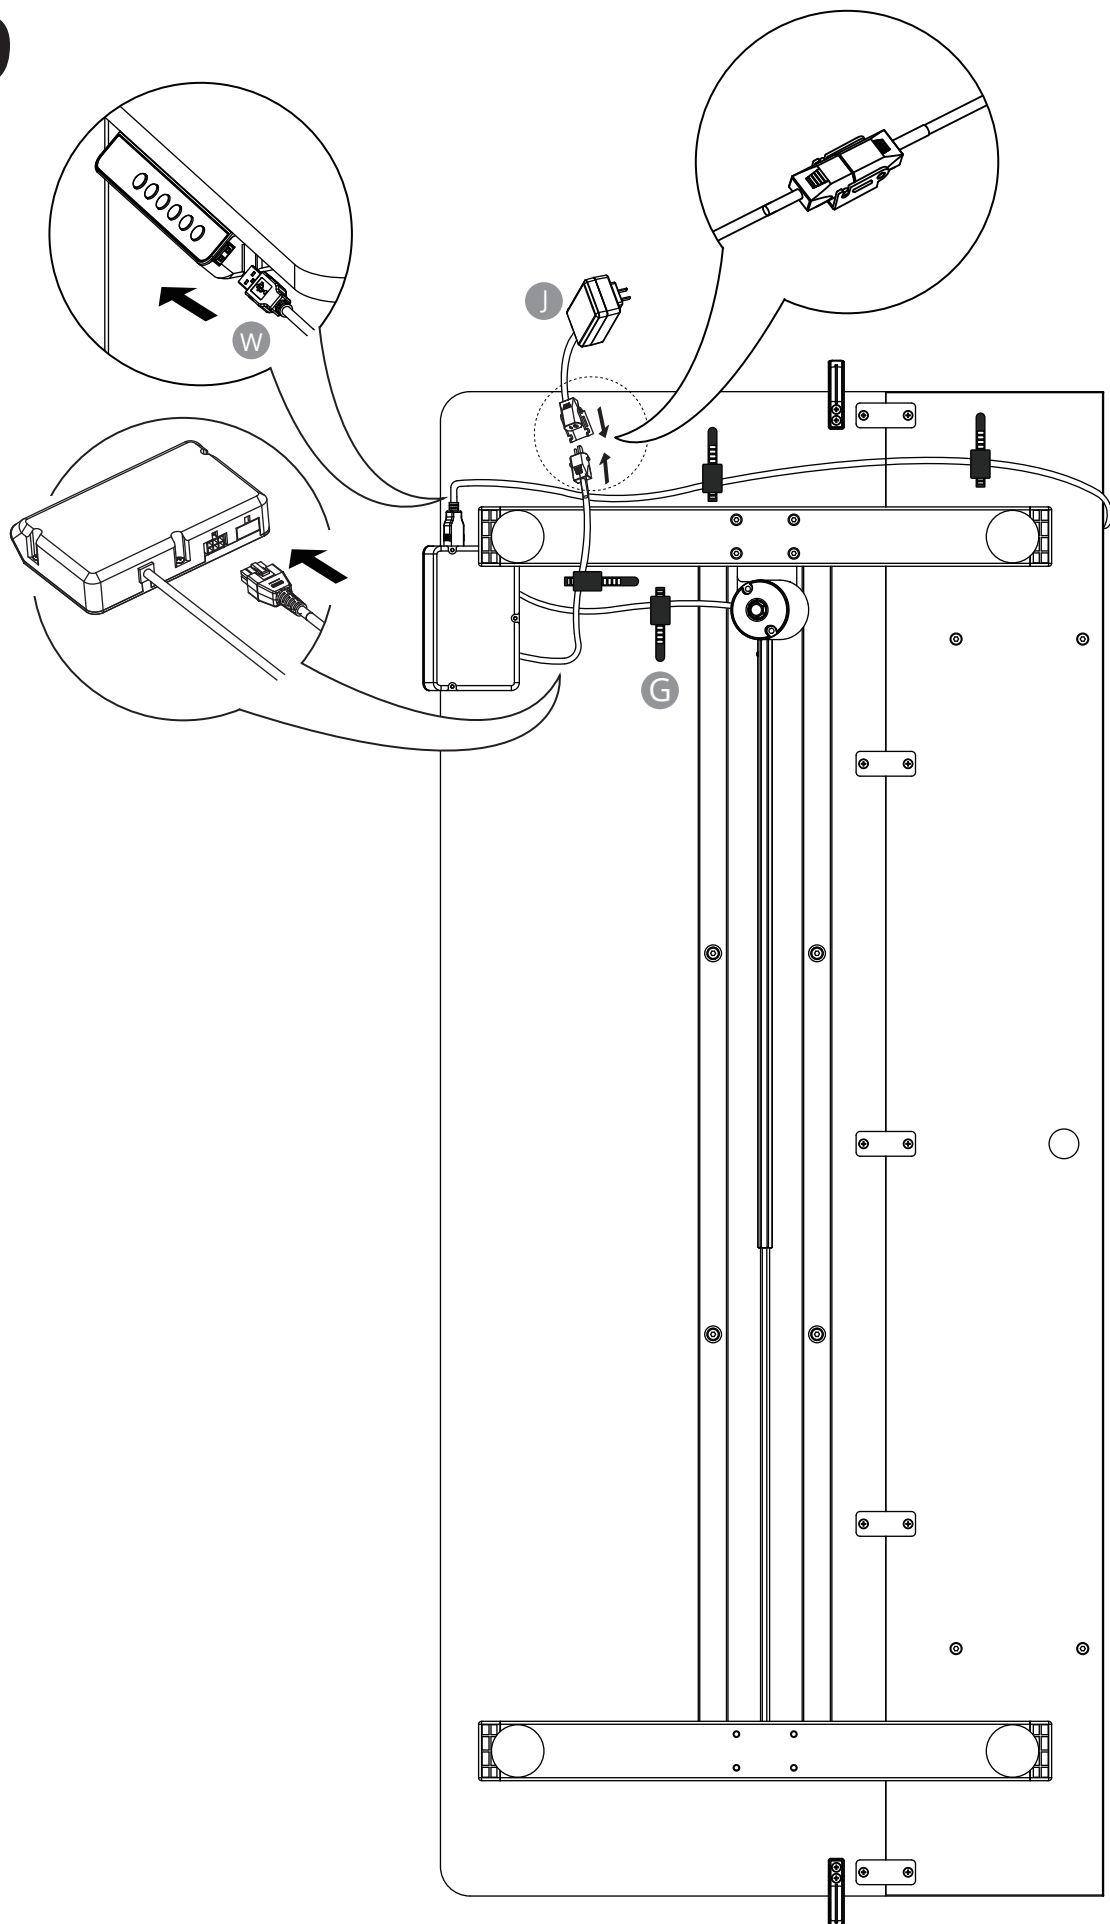


20

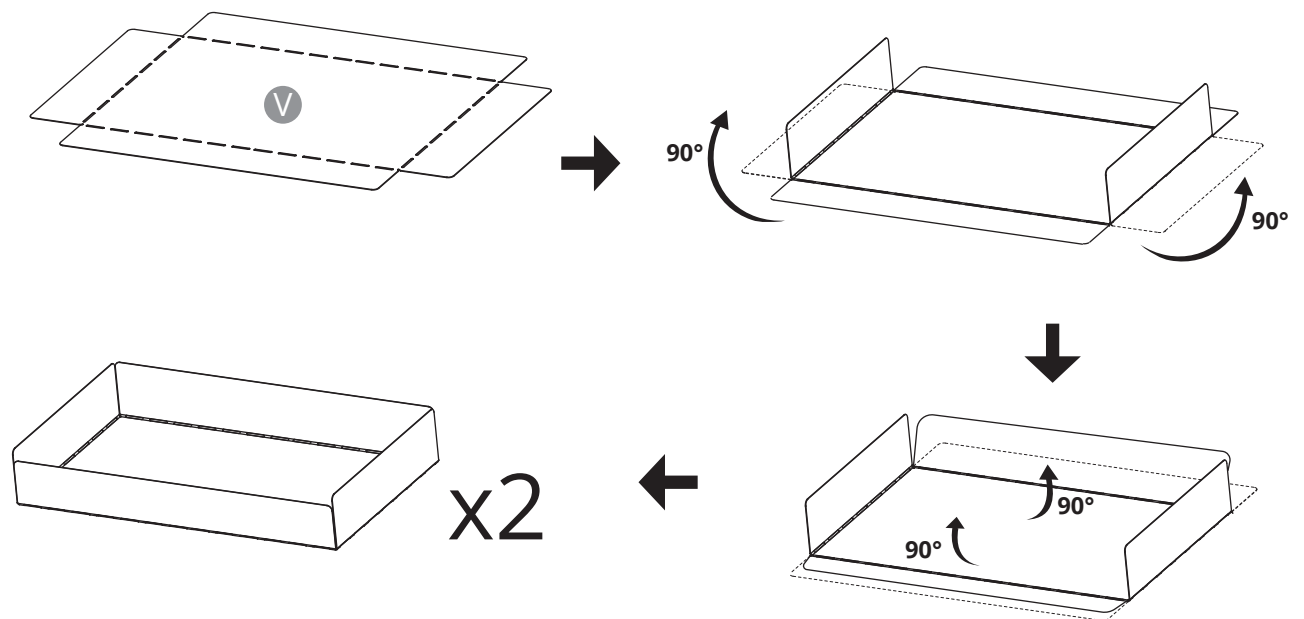


21

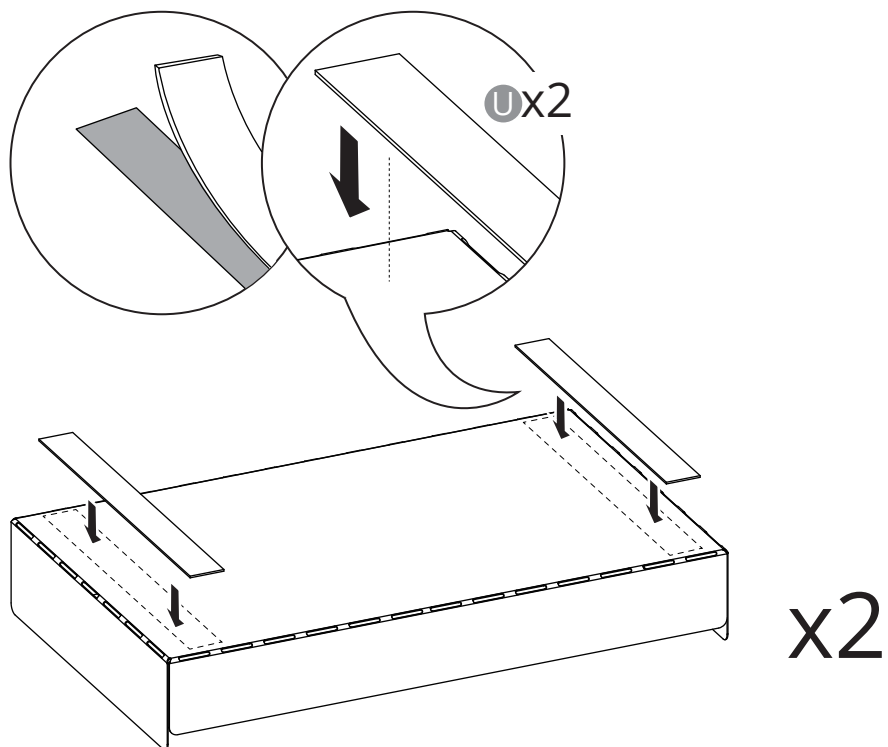

22

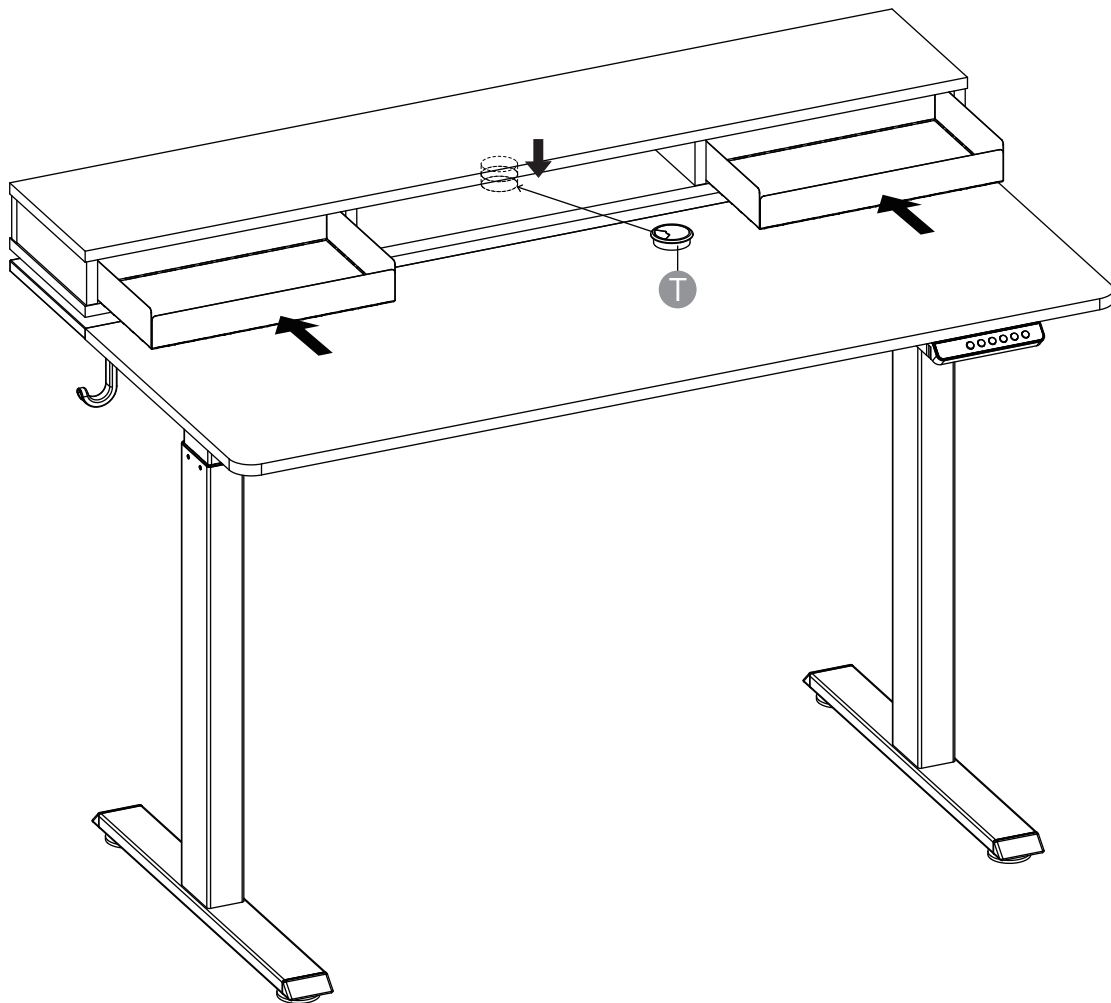

Controller Instruction

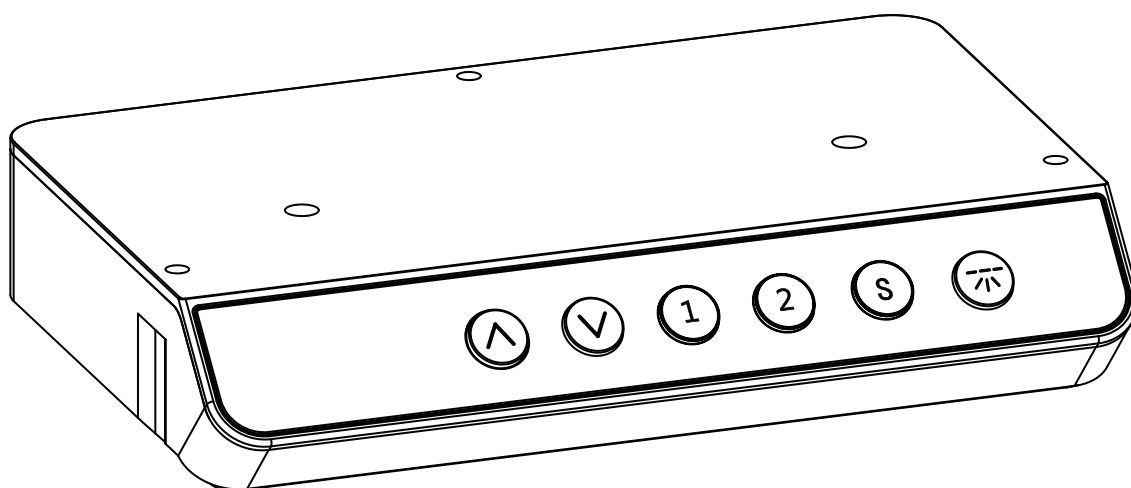

Keys function description			
Key name	Operation instruction	Duration	LED signal
⬆	Lift desktop	Press and hold the key	Press and hold the ⬆ key to lift the desktop, the LED displays the real-time height value, and the desktop stops running when the key is released.
⬇	Lower desktop	Press and hold the key	Press and hold the ⬇ key to lower the desktop, the LED displays the real-time height value, and the desktop stops running when the key is released.
① ② S	Set memory height	Click S key	Display the current desktop height value flashing, and press ① / ② key to set the current height value as the memory value.
① ②	Execute memory height	Click the number key	In the normal state, press the number key to call the corresponding height, and the standing desk will automatically run to the corresponding position.
⬆ ⬇	Reset	Press and hold the ⬆ and ⬇ keys simultaneously for 3 seconds	Reset in "E-1, E-2" alarm state or at any position: Press and hold the ⬆ and ⬇ keys simultaneously for 3 seconds, and the LED will display "rst" and "E-1" flashing alternately. During the whole process, the hand will not be released. After the desktop continues to run down to the lowest mechanical zero point, walk back for 5mm, and the LED will display the lowest height value of 70.0 or 27.5. The reset is completed.
S	Height interval setting	Press and hold the key for 6 seconds	Press and hold the S key. When the LED displays "HLP", release the S key. At the moment, the LED flashes and displays "HLP" and the current height value. At the moment, the current height value can be adjusted by the ⬆ or ⬇ keys: 1. Press the number key ①, and the LED will flash and display "H-P". At the moment, pressing the ⬆ or ⬇ keys will not respond. You can only press the S key to save the current value. 2. Press the number key ②, and the LED will flash and display "LH-P". At the moment, pressing the ⬆ or ⬇ keys will not respond. You can only press the S key to save the current value. 3. Press and hold the S key for 3 seconds to directly delete the set maximum and minimum heights.
S	Restore factory settings	Press and hold the key for 9 seconds	Press and hold the S key. When the LED displays "FAC", release the S key, and the FAC still flickers. Operate the S key again to restore the factory settings.
S	Unit conversion	Press and hold the key for 3 seconds	Press and hold the S key. When the LED displays "SEt", release the S key. At the moment, the "SEt" will flash. Press the number key ① to enter the unit conversion setting. At the moment, the LED will flash and display "unt" and the current height value. Adjust the unit by pressing the ⬆ or ⬇ keys. Press the S key to save the current setting.

Ⓢ	Stop sensitivity adjustment in case of any obstruction	Press and hold the key for 3 seconds	Press and hold the Ⓢ key. When the LED displays "SEt", release the Ⓢ key. At the moment, the "SEt" is still flashing. Press the number key ② to enter the sensitivity setting. At the moment, the LED will flash and display "cpt" and the current sensitivity value. Adjust the sensitivity value by pressing the Ⓐ or Ⓟ keys. Press the Ⓢ key to save the current setting.
Ⓢ ②	Lock key	Press and hold the key for 3 seconds	1. Press and hold the Ⓢ and ② keys at the same time for 3 seconds to lock the system, the LED display will turn off after 2 seconds when "OFF" is displayed. 2. When the LED display is locked, press and hold the Ⓢ and ② keys at the same time for 3 seconds until the current height is displayed, release both keys to finish the unlocking process.
Ⓜ	Light ON/OFF key	Click the key	Click it alternately to turn the light on and off

Fault description		
Fault designation	Fault code	Fault description
Communication fault	Err	When the communication line sequence of the keypad and the control box is wrong, Err is displayed
Power-on reset	E-1	When the system does not save the current position, the LED flashes and displays "rSt" and "E-1"
Stall protection	E-2	In case of motor stalling, the LED will flash and display "rSt" and "E-2"
Rebound in case of any obstruction	E-3	In the process of operation, the LED flashes and displays "E-3" in case of any obstruction. Stops running and run in the opposite direction for 30mm, and then the LED displays the real-time height
Motor fault	E-5	When the connecting line of the motor is disconnected/loose, the motor 1 fails, and the LED flashes and displays "rSt" and "E-5"
Overload protection	ovr	When the load exceeds the set value, the LED flashes and displays ovr. At the moment, the alarm can be released by removing the partial weight of the desktop and powering on the controller again.
Overvoltage protection		When the input voltage of the controller exceeds 34V, the LED turns black
Motor overheating protection	hot	After the motor runs continuously for 2min (hot is displayed automatically after 2min), the LED displays hot, and it can work normally after 18min



FR

Cet appareil
se recycle



REPRISE
À LA LIVRAISON



À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !